




CONTROL UNITS

SC Preheater

Operating instructions

Operating instructions SC Preheater

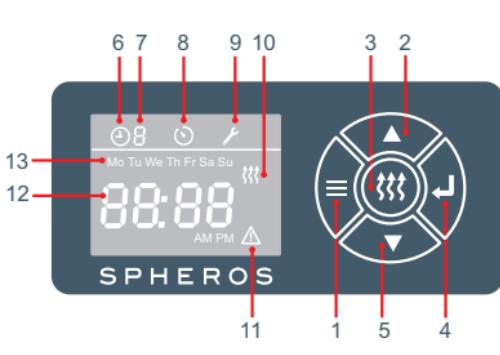

- 1 Menu button
- 2 Selection button UP
- 3 Instant heating button
- 4 Confirmation button
- 5 Selection button DOWN
- 6 Preselection time
- 7 Active preselection time
- 8 Operation duration
- 9 Settings
- 10 Heater is on
- 11 Error message
- 12 Time
- 13 Weekday

General

The preselection timer enables you to preset the start of the heater operation up to 7 days in advance. It is possible to program 7 different starting times, only one of which can be activated.

The activation of the preset time is only possible for the same and the following day. Activation for Sunday and Monday is already on Friday, activation for Monday is possible on Saturday.

With switched on ignition, the display shows the current time and day of the week.

If 10 seconds no action, the preselection timer returns to the standard display.

If the buttons and are pressed longer than 0.5 seconds, the fast scroll is activated.

Menu selection

Get the menu bar (6-9) by pressing the button. Use the buttons and to select the menu / "Active preselection time" (7) / or and confirm by pressing the button .

Note: Using the button allows to return from all menus to the standard display (unsaved settings will be lost).

Operation

To access a menu using the button, the heating function must be disabled. Any selection and setting of values is made using the selection buttons and , and confirmed by the button.

Switch the preselection timer on

- switch on ignition,
- if ignition is off - press button (instant heating), or
- automatically if preselection time is activated

Switch the preselection timer off

- switch off ignition (the preselection timer goes into the sleep mode)
- the timer turns off after the expiry of remaining time or the programmed operation duration.

the week, the hours and the minutes.

Confirm each respectively using .

Note: In the 12h mode, after setting of the minutes, further choose AM or PM by the selection buttons - confirm using .

Setting time/day of the week

Select menu . Use the buttons  and  to select the 12h or 24h mode - confirm by pressing . Use the buttons  and  to select the day of the week, the hours and the minutes. Confirm each respectively using .

Note: In the 12h mode, after setting of the minutes, further choose AM or PM by the selection buttons - confirm using .

Activate preselection time

Select menu "Active preselection time" (). By using the buttons  and  choose the memory place with the pre-selected time - confirm with .

Deactivate preselection time

Select menu "Active preselection time" (). Press  or  repeatedly until symbol  appears - confirm using .

Programming operation duration

Select menu  - the operation duration flashes. Using  and  adjust the operation duration - confirm with .

Instant heating

Press  for continuous operation, with activated ignition -  flashes on the display and appears permanently after a positive feedback of the heater.

If button  is pressed with deactivated ignition, the display shows the default value of the programmed operation time. By pressing the buttons  and  the operation duration can be adjusted and with  confirmed. On the display  appears  and the heater is operated for the time as programmed.

Read out heater errors

During heater malfunctions the symbol  flashes. Error code display by simultaneously pressing the buttons  and .

Remote control

Equivalent of the function instant heat.

Programming heater starting time

Select the menu  - the memory location  is flashing. Use the buttons  and  to select the memory location - confirm using . By pressing the buttons  and  select the day of



Valeo Thermal Commercial Vehicles Germany GmbH
Postfach 1371
82198 Gilching - Germany
Tel. +49 (0)8105 7721-0
Fax +49 (0)8105 7721-889
www.valeo-thermalbus.com - service-valeobus@valeo.com